

Adapterbausatz/Tellerrohling DADG-AK-.../DADG-UPF-...

FESTO

Festo AG & Co. KG
Postfach
D-73726 Esslingen
++49/(0)711/347-0
www.festo.com

Bestimmungsgemäß dient der Bausatz als Adapter zwischen dem Rundschalttisch DHTG und einem feststehenden Teller DADG-UPF-....


→ Hinweis

Um Funktionsstörungen und erhöhten Verschleiß zu vermeiden.


- Stellen Sie sicher, dass die O-Ringe bei der Montage gefettet sind und nicht verdrillt werden.

1. Adapterbausatz DADG-AK-65

1a. Teileliste

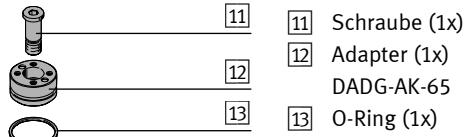


1b. Montage

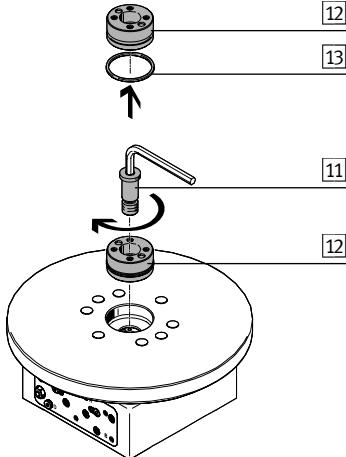


2. Adapterbausatz DADG-AK-90/-140/-220

2a. Teileliste

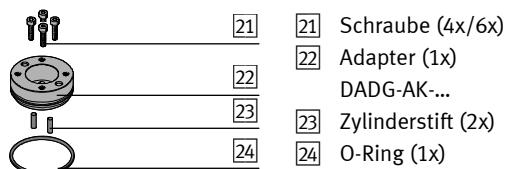


2b. Montage

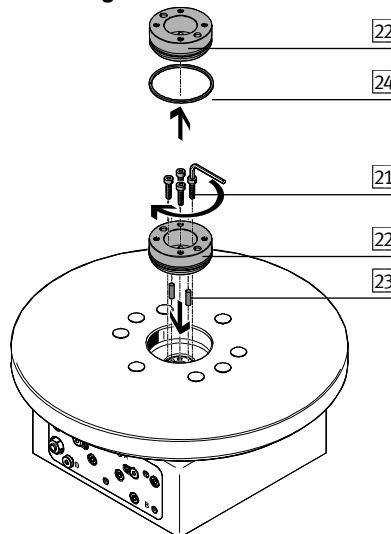


- Platzieren Sie den O-Ring 24 in der Nut im Adapter 22.

3. Tellerrohling für feststehenden Teller DADG-UPF-...

3a. Teileliste

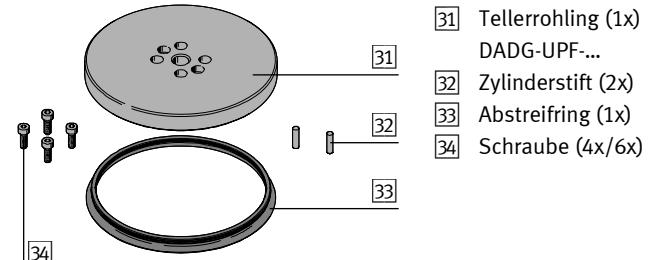

3b. Montage

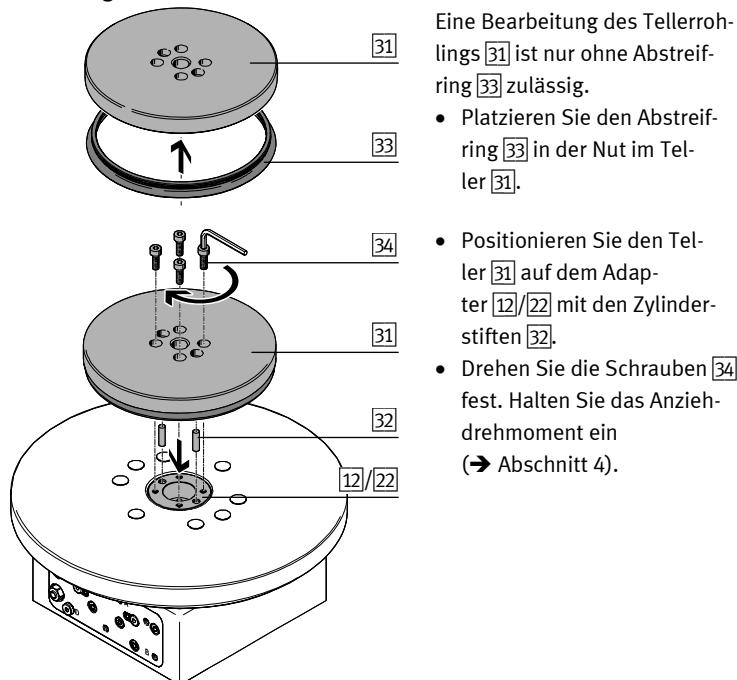

Eine Bearbeitung des Tellerrohlings 31 ist nur ohne Abstreifring 33 zulässig.

- Platzieren Sie den Abstreifring 33 in der Nut im Teller 31.

- Positionieren Sie den Teller 31 auf dem Adapter 12/22 mit den Zylinderstiften 32.
- Drehen Sie die Schrauben 34 fest. Halten Sie das Anziedrehmoment ein (→ Abschnitt 4).

4. Anziedrehmomente¹⁾

DADG-AK-/UPF-...	65	90	140	220
21 Schraube [Nm]	G1/8 10	—	—	—
21 Schraube [Nm]	—	M3x12 1,2	M4x20 2,9	M5x20 5,9
34 Schraube [Nm]	M4x12 2,9	M4x12 2,9	M6x16 9,9	M8x16 24

¹⁾ Toleranz für nicht tolerierte Anziedrehmomente > 1 Nm: ± 20 %.

Adapter kit/Blank plate DADG-AK-.../DADG-UPF-...

FESTO

Festo AG & Co. KG

Postfach
D-73726 Esslingen
++49/(0)711/347-0
www.festo.com

The kit is intended as an adapter between the rotary indexing table DHTG and fixed blank plate DADG-UPF-....


→ Note

To avoid functional faults and increased wear:

- Make sure that the O-rings are greased and are not twisted when fitted.


1. Adapter kit DADG-AK-65

1a. Parts list

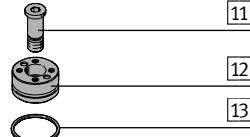

- [11] Screw (1x)
- [12] Adapter (1x)
DADG-AK-65
- [13] O-ring (1x)


1b. Assembly

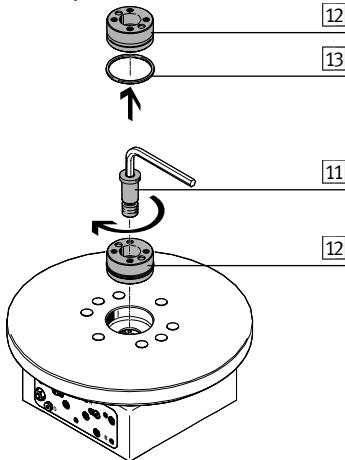

- Place the O-ring [13] in the groove in the adapter [12].
- Position the adapter [12] in the rotary indexing table DHTG. Make sure that the claws on the bottom of the adapter [12] grip into the recesses on the DHG.
- Tighten the screw [11].
Maintain the tightening torque
(→ Section 4).


2. Adapter kit DADG-AK-90/-140/-220

2a. Parts list

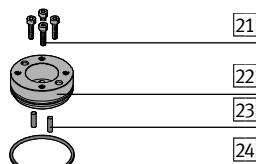

- [21] Screw (4x/6x)
- [22] Adapter (1x)
DADG-AK-...
- [23] Cylindrical pin (2x)
- [24] O-ring (1x)


2b. Assembly

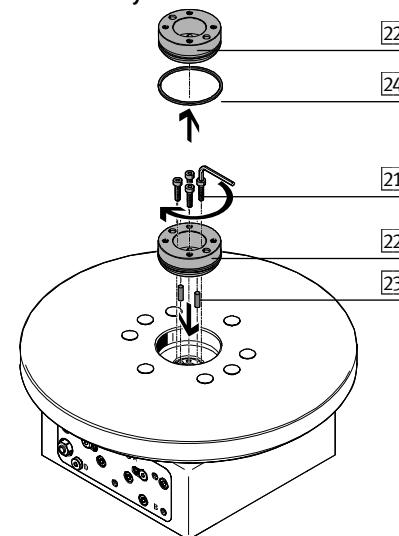

- Place the O-ring [24] in the groove in the adapter [22].
- Position the adapter [22] on the fixed centre part of the rotary indexing table DHTG with the cylindrical pins [23].
- Tighten the screws [21].
Maintain the tightening torque
(→ Section 4).


3. Blank plate for fixed plate DADG-UPF-...

3a. Parts list

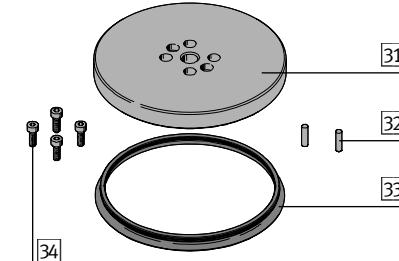

- [31] Blank plate (1x)
DADG-UPF-...
- [32] Cylindrical pin (2x)
- [33] Scraper ring (1x)
- [34] Screw (4x/6x)

3b. Assembly

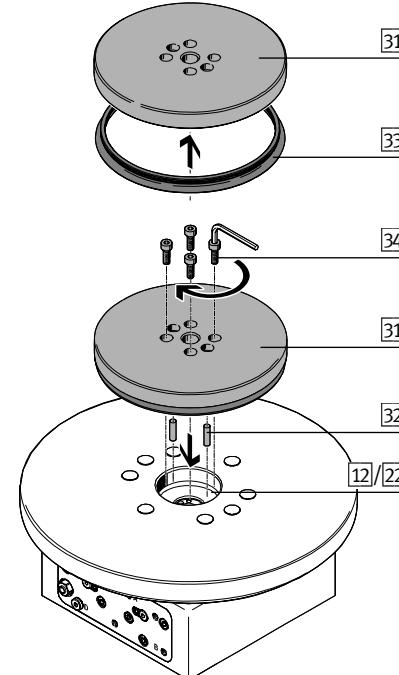

Processing of the blank plate [31] is only permitted without the scraper ring [33].

- Place the scraper ring [33] in the groove in the plate [31].
- Position the plate [31] on the adapter [12]/[22] with the cylindrical pins [32].
- Tighten the screws [34].
Maintain the tightening torque
(→ Section 4).

4. Tightening torques¹⁾

DADG-AK/-UPF-...	65	90	140	220
[11] Screw [Nm]	G1/8 10	—	—	—
[21] Screw [Nm]	—	M3x12 1,2	M4x20 2,9	M5x20 5,9
[34] Screw [Nm]	M4x12 2,9	M4x12 2,9	M6x16 9,9	M8x16 24

¹⁾ Tolerance for non tolerated tightening torques > 1 Nm: ± 20 %.